
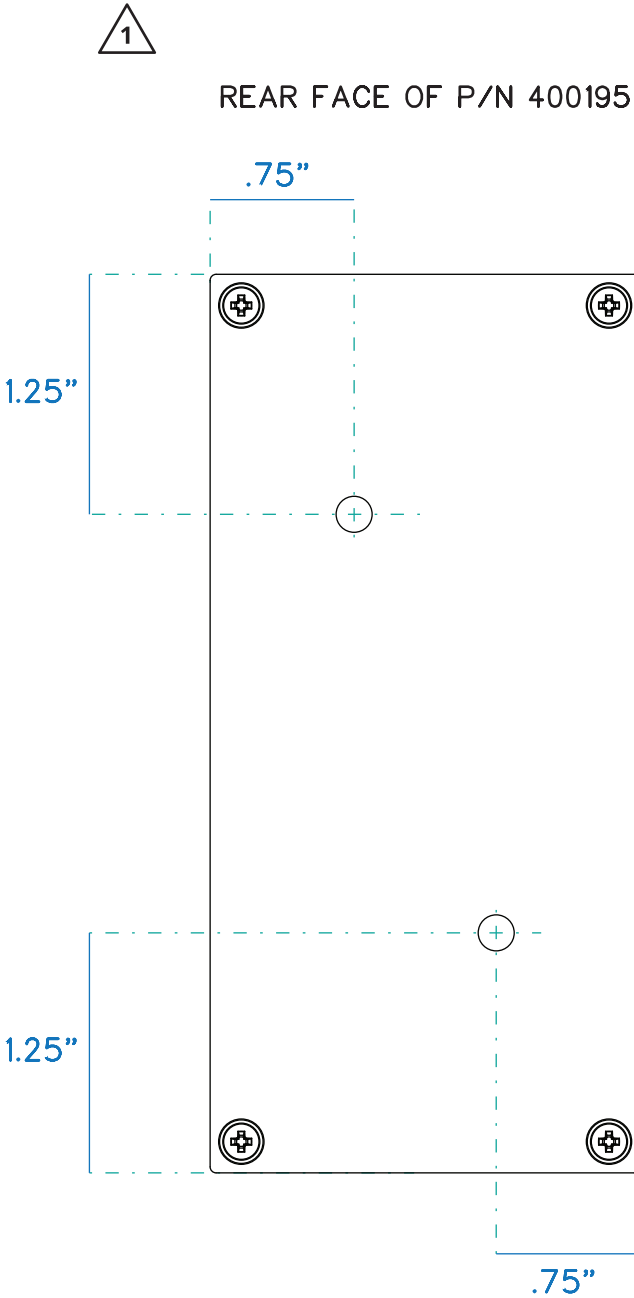


REV	REVISION DESCRIPTION	DATE	APPROVED
-	----	-----	----

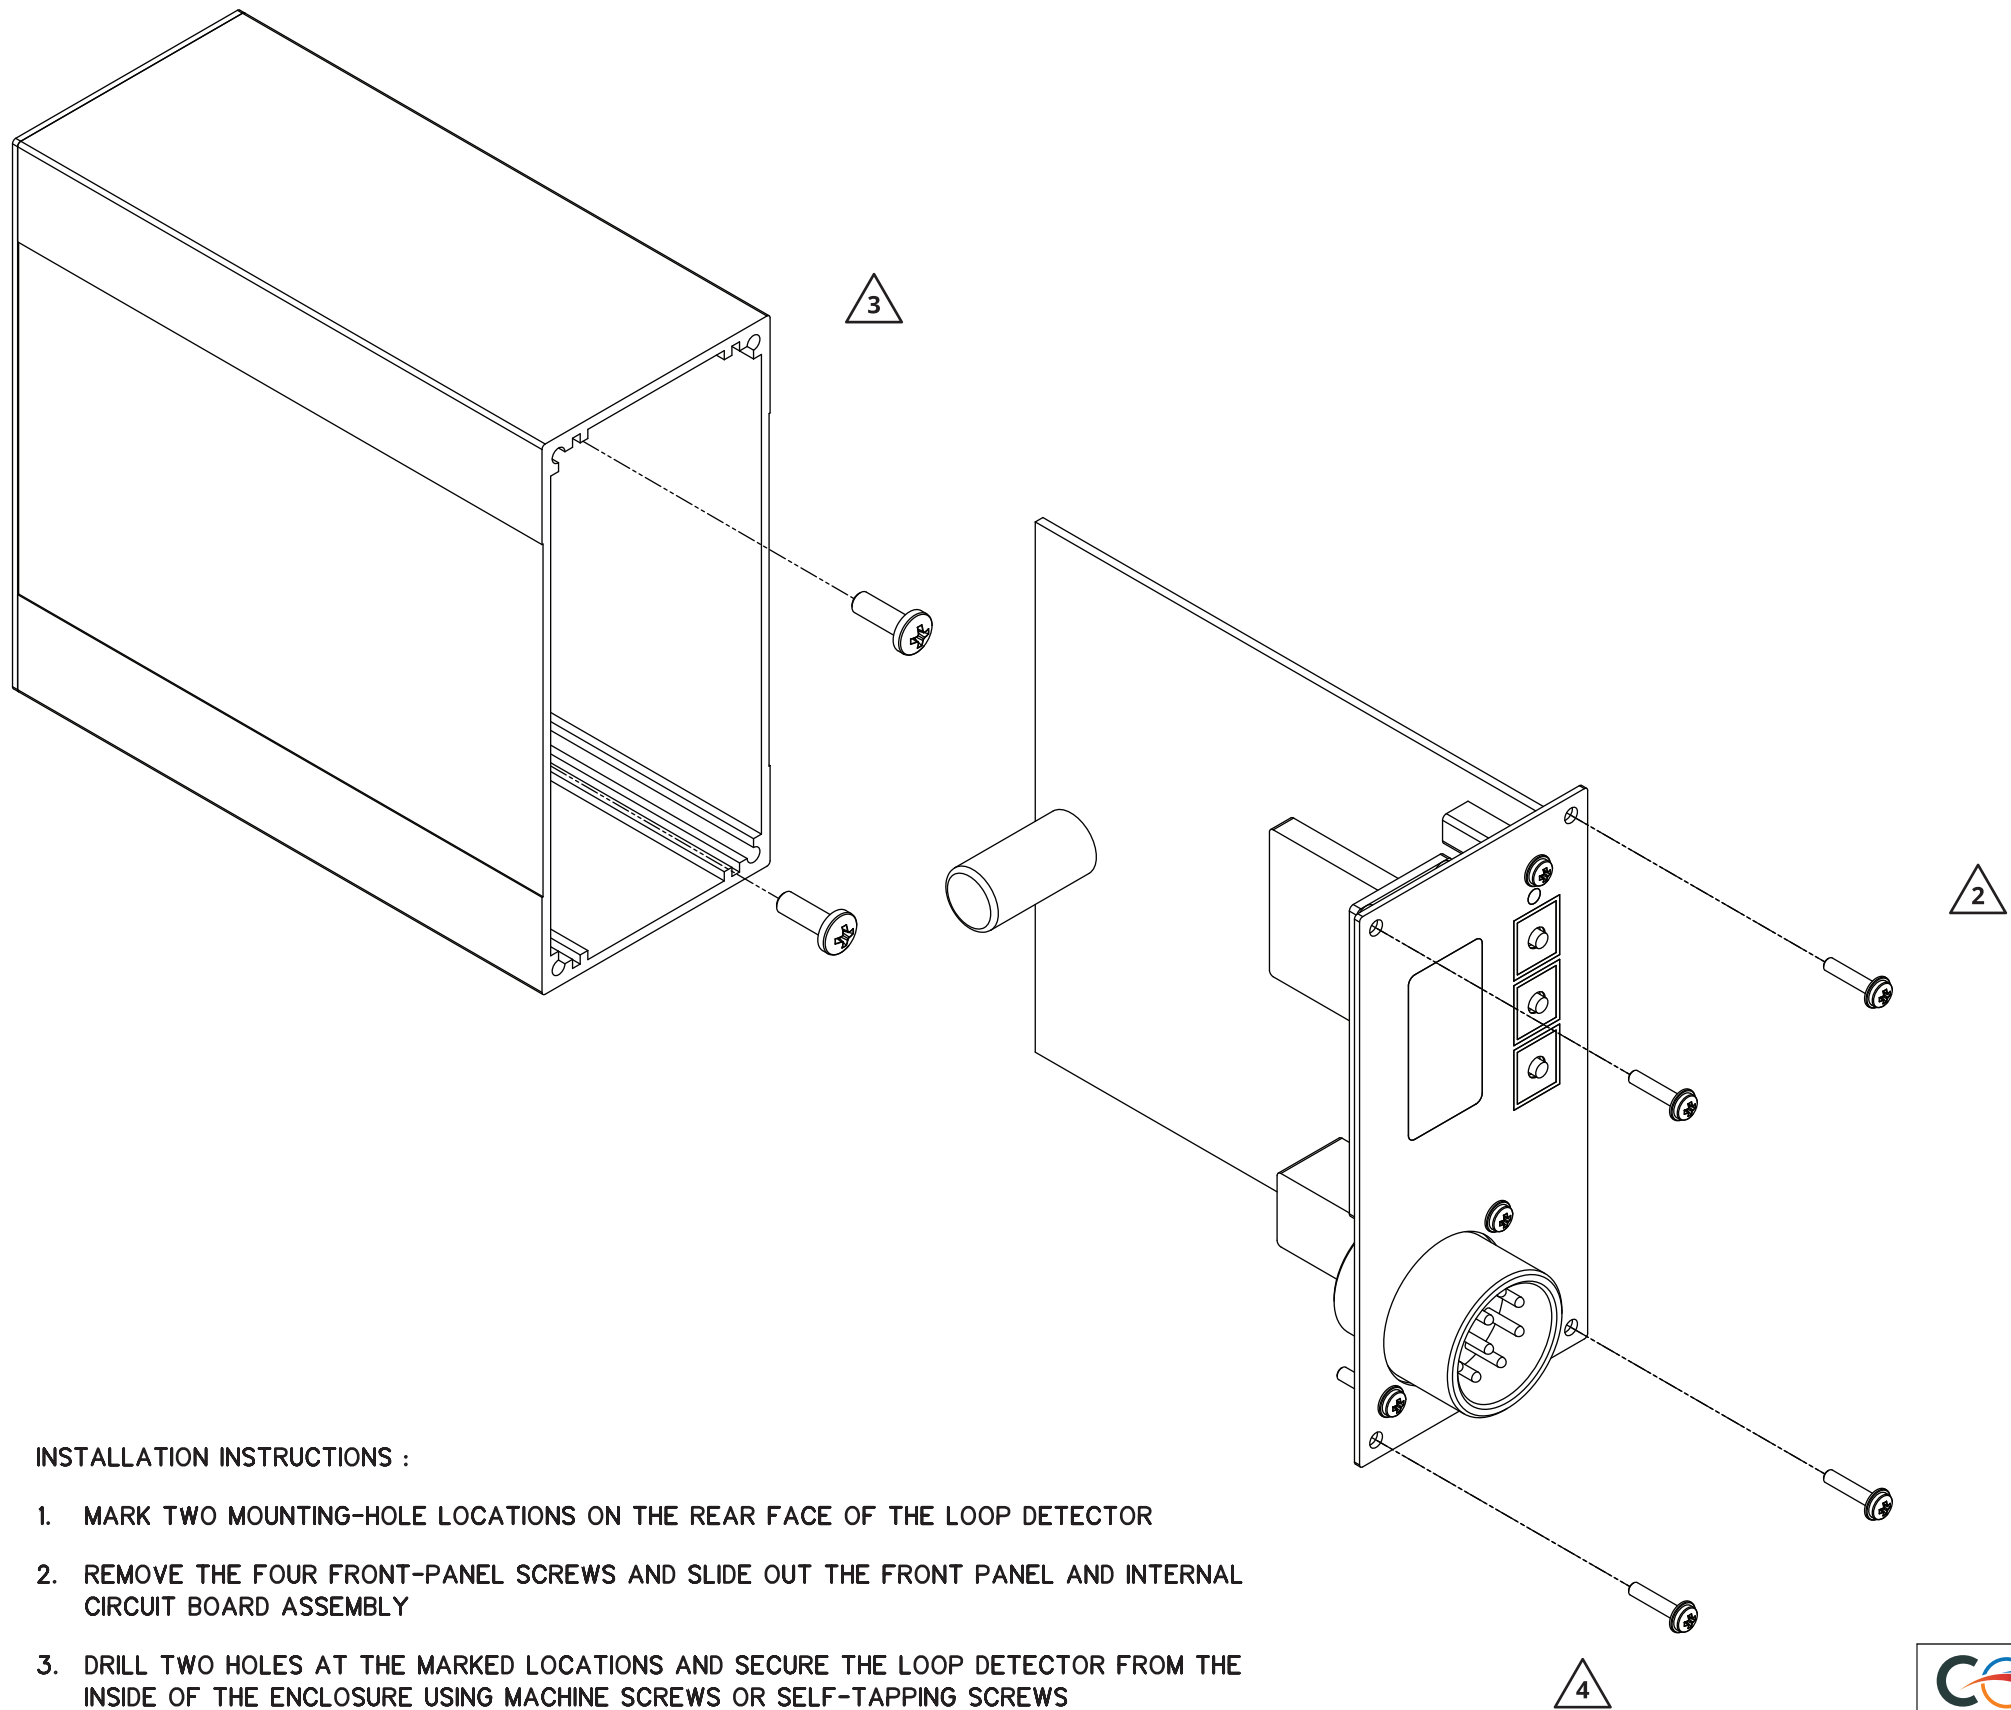

INSTALLATION INSTRUCTIONS :

1. MARK TWO MOUNTING-HOLE LOCATIONS ON THE REAR FACE OF THE LOOP DETECTOR
2. REMOVE THE FOUR FRONT-PANEL SCREWS AND SLIDE OUT THE FRONT PANEL AND INTERNAL CIRCUIT BOARD ASSEMBLY
3. DRILL TWO HOLES AT THE MARKED LOCATIONS AND SECURE THE LOOP DETECTOR FROM THE INSIDE OF THE ENCLOSURE USING MACHINE SCREWS OR SELF-TAPPING SCREWS
 - RECOMMENDED : 3/16" DRILL BIT, #8-32 SCREWS (INSTALLER-SUPPLIED FASTENERS)
4. REINSTALL THE INTERNAL CIRCUIT BOARD AND FRONT PANEL USING THE ORIGINAL HARDWARE

	DRAWN	NAME	DATE	TITLE	
	APPROVED	JTW	02.12.26	400195 LOOP MOUNTING INSTALLATION	
2405 NICHOLSON AVE, KANSAS CITY, MO 64120		DIVISION		PART NUMBER	
		ELECTRONICS		----	
USE OF THIS DOCUMENT AND INFORMATION IS ONLY GRANTED UNDER CONSIDERATION OF OR USE UNDER CONTRACTUAL AGREEMENT. THIS DOCUMENT IS PROPERTY OF COMET INDUSTRIES AND MUST BE RETURNED / DESTROYED ON REQUEST.		SERIES		DESCRIPTION	
		INSTALL		400195 LOOP DETECTOR MOUNTING HOLE LAYOUT	
		PROJECT		DWG NO.	
		----		481501	
				VERSION	
				-	
				SCALE	
				NTS	
				SHEET	
				1 OF 1	