



REV	REVISION DESCRIPTION	DATE	APPROVAL

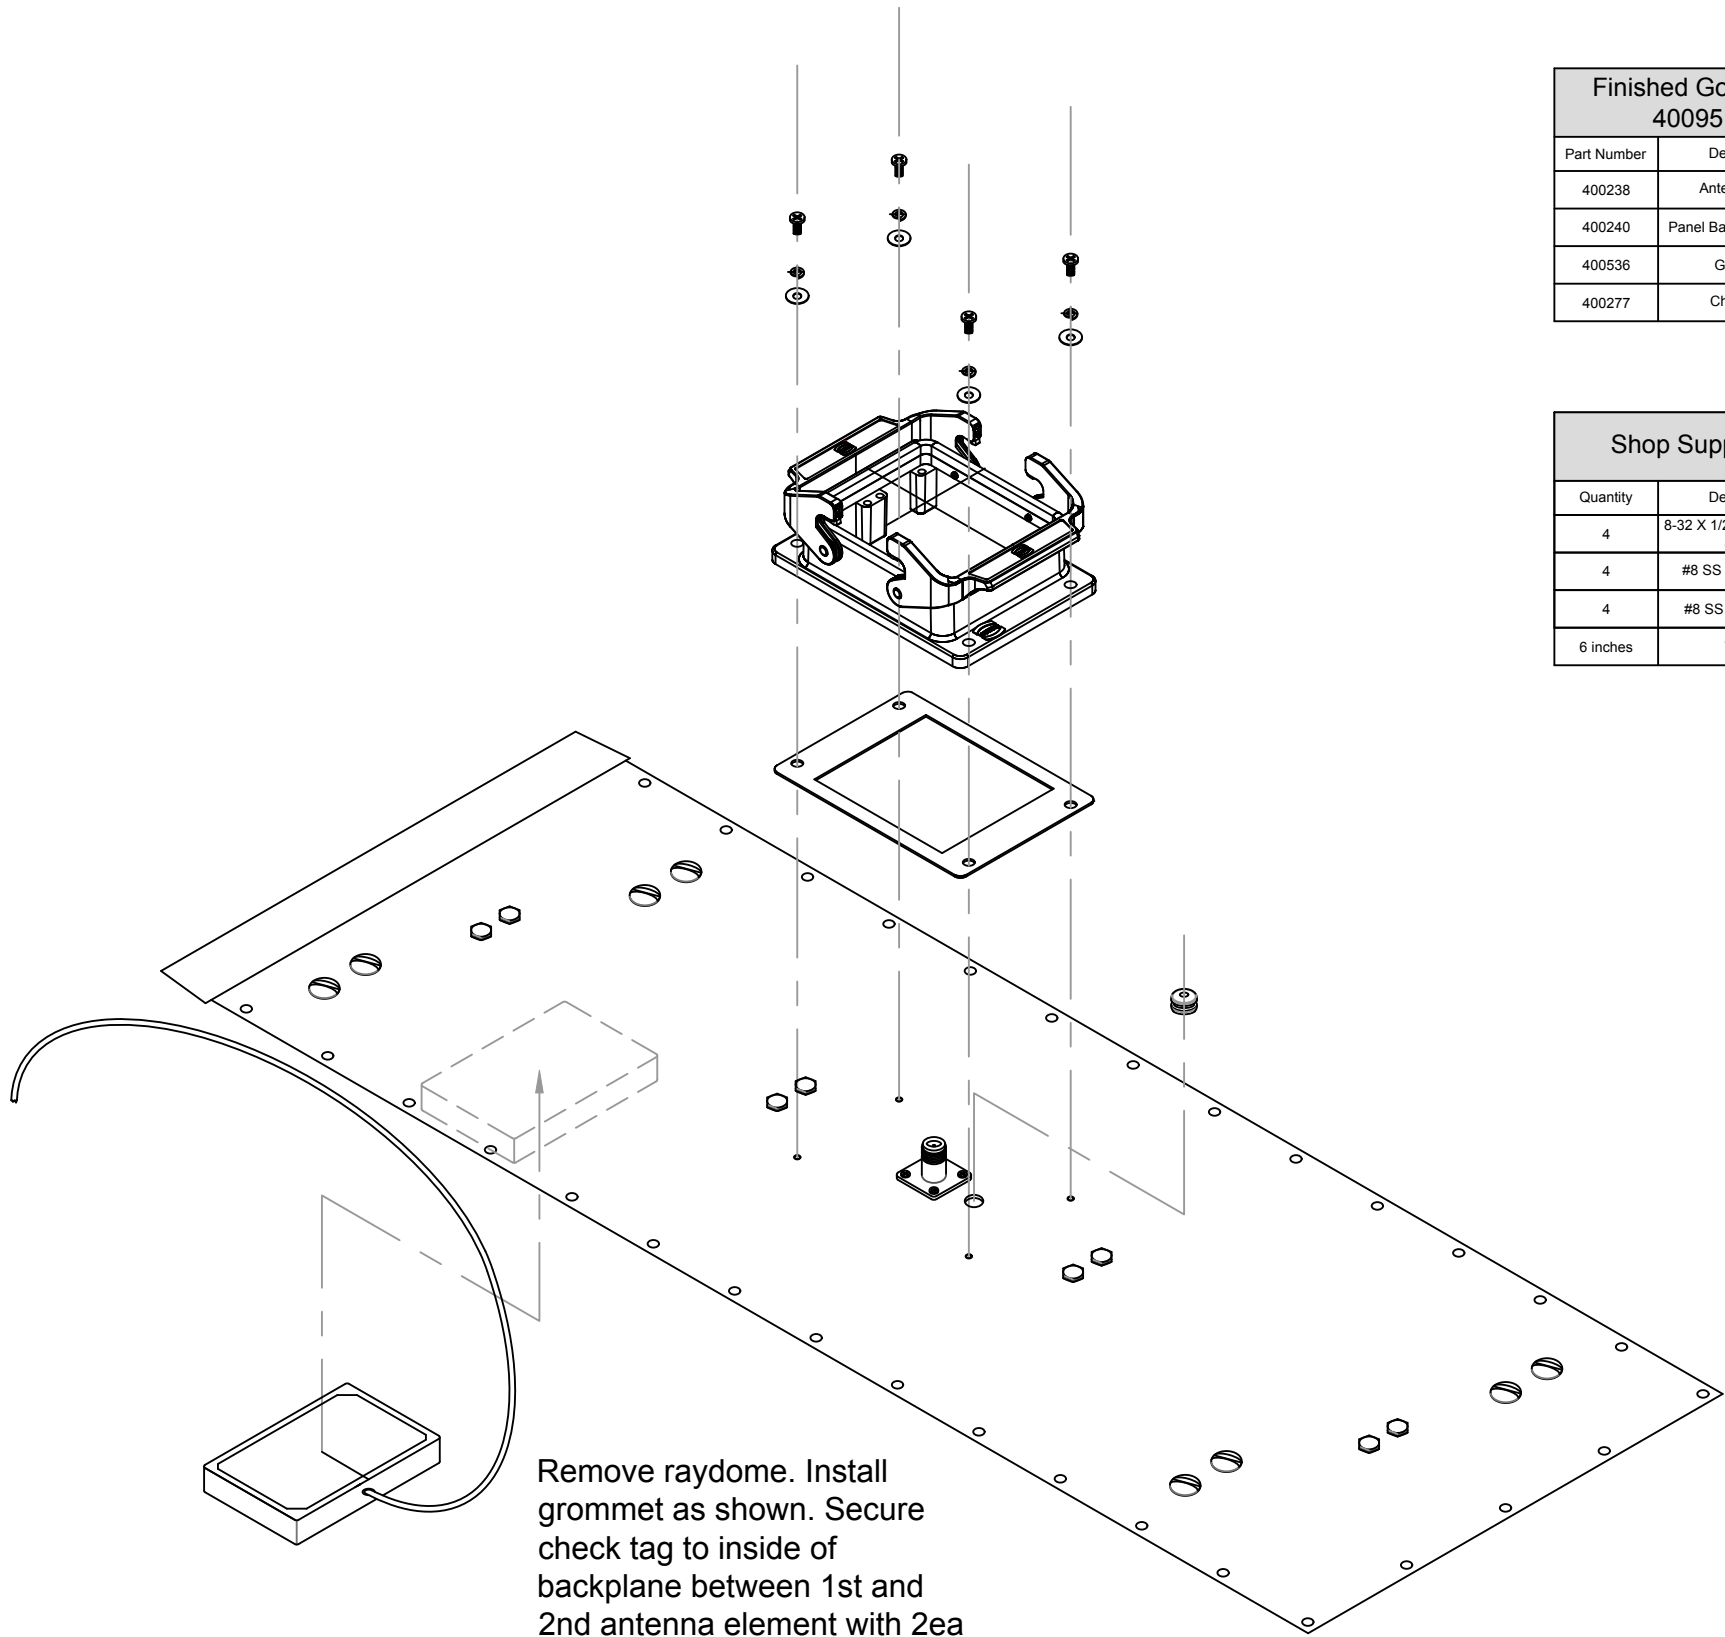

Finished Goods # 400951	
Part Number	Description
400238	Antenna Ass'y
400240	Panel Base with Gasket
400536	Grommet
400277	Check Tag

Shop Supplies	
Quantity	Description
4	8-32 X 1/2" SS Pan Head Screw
4	#8 SS Split Washer
4	#8 SS Flat Washer
6 inches	Velcro

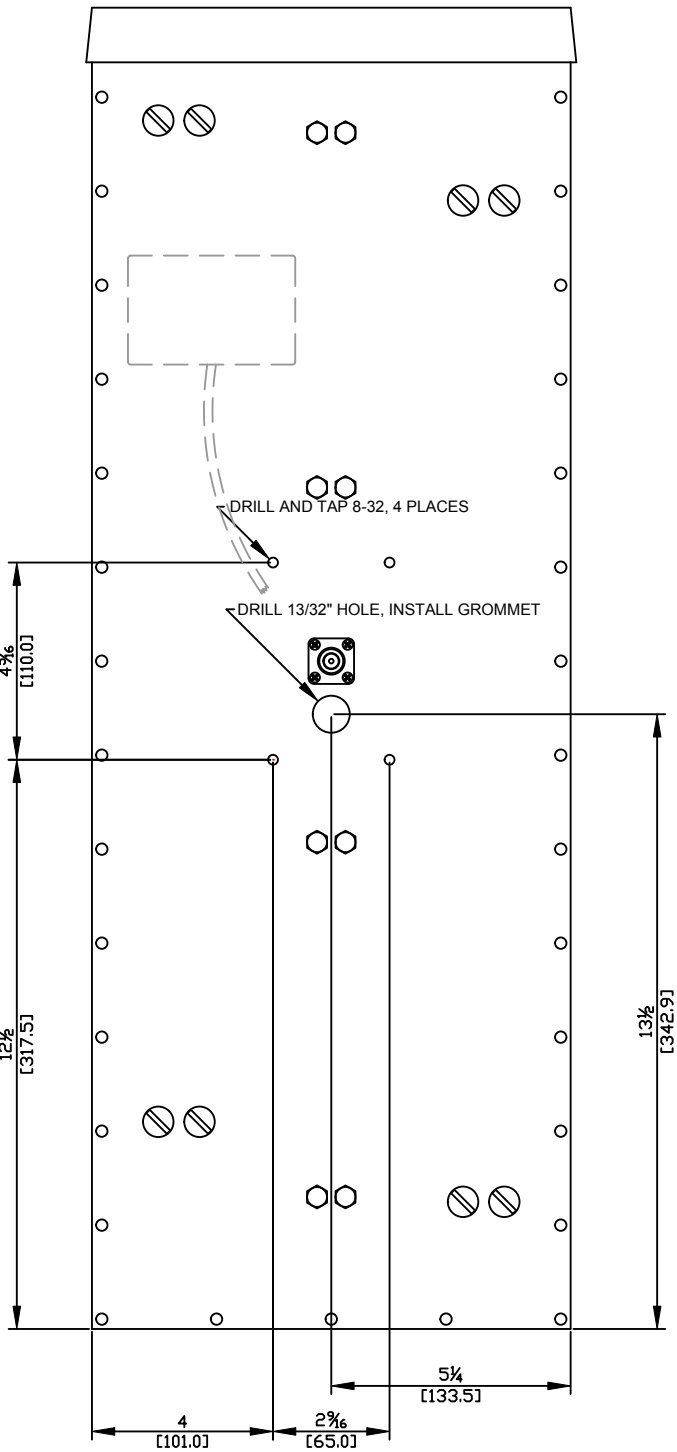

Remove raydome. Install grommet as shown. Secure check tag to inside of backplane between 1st and 2nd antenna element with 2ea 3" strips of Velcro. Feed cable through grommet. Secure cable to element support near grommet with ziptie. Reinstall raydome. Install panel base and gasket as shown.

EXPORT REQUIREMENT NOTICE:
THESE COMMODITIES, TECHNOLOGY OR SOFTWARE WERE EXPORTED FROM THE UNITED STATES IN ACCORDANCE WITH THE EXPORT ADMINISTRATION REGULATIONS. DIVERSION CONTRARY TO U.S. LAW IS PROHIBITED. THE COMMODITIES MAY NOT BE RESOLD, TRANSFERRED, TRANSSHIPPED OR REEXPORTED WITHOUT PRIOR AUTHORIZATION BY THE U.S. GOVERNMENT.



2405 Nicholson Ave.
Kansas City, MO 64120

DWG NAME

Parapanel Antenna Assembly
w/ Panel Base and Check Tag

COMET Proprietary

USE OF THIS DOCUMENT AND INFORMATION IS ONLY GRANTED UNDER CONSIDERATION OF OR USE UNDER CONTRACTUAL AGREEMENT. DOCUMENT IS PROPERTY OF COMET AND MUST BE RETURNED/DESTROYED ON REQUEST.

DWG NO.
400951

DIMENSIONS:
IN [mm]

PARTS SHOWN

SCALE
N.T.S.

REV
-

SHEET
1

OF
1

DRAWN DDC	DATE 02.10.2020
ENGINEER	DATE
APPROVED	DATE